



CC-9060

INSTRUCTIONS

INSERTING BATTERIES

- Operates with 4 standard AA batteries, (batteries are not include)
- Remove the brush base
- Insert 4 batteries
- Close the base, making sure it is properly pressed in

USING THE CLEANING BRUSH

- Press the button to switch on
- Move the brush slowly over the area you want to clean/polish.
- Press the button again to switch off
- Rinse the cleaner after use, remove any soup residue

CHANGING BRUSH HEADS

- 4 interchangeable brush heads included
- Hold the brush facing you, turn the interchangeable brush head to the right and remove it.
- Select another brush head and push the brush head down
- Turn the head to left to fix it in place.

SAFETY PRECAUTIONS

- This cleaning brush is not a toy.
- Keep out of reach of children
- Before use, test it out on a small section of the area to be cleaned to check there is no scratching

BATTERY WARNING

- Non-rechargeable batteries are not to be recharged.

Made in P.R.C.



- Recharge batteries under adult supervision.
- Remove rechargeable batteries from item before recharging.
- Use only recommended batteries.
- Don't mix old and new, or different types of batteries.
- Insert batteries in correct polarity.
- Don't short-circuit supply terminals.
- Remove exhausted batteries from the item.
- Keep packaging as it contains important information.

RECYCLING STATEMENT

- Help the environment by disposing of your product responsibly.
- The wheelie bin symbols indicate the product and batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health.
- Please use designated collection points or recycling facilities when disposing of the item and batteries.

CE RoHS

