



Instructional Manual



Model: CC-9084
4 in 1 Facial Cleaner

*Please read the operating instructions carefully before using this product.
Please store it properly after reading, so that you can refer to it later*

Introduction to function key operation:

			
<i>This indicator will light up when you rotate 360 degrees to clean your face</i>	<i>This indicator light will light up when using vibrate cleanser to remove makeup</i>		
			
<i>Front rotating brush head switch long press 2 seconds to start up, for gear position adjustment</i>	<i>Rear cleaning brush, operate the switch and press for 2 seconds to start up, adjust four gears</i>		
	Rotating indicator light		The green light Button W selects the gear and green light is on
	Vibration indicator		The green light Button M selects the gear, and the green light is on

Warm prompt:

Please make sure the waterproof plug cover is tight before use. Wash your face, otherwise the machine will be damaged by water. Please keep the charging port dry when charging,

Method of Use:

1. Aim the brush head at the slot and press and install it on the machine.
2. Press the switch button to start the machine, and then press the button to select the gear position. The order of the keys is one gear is the default when starting the machine, and then two, three and four gears. Normal use 17 molecules for a period to the system automatically shut down, again use must be restarted.
3. Gently move the brush head back and forth on the face, and do not press it with your hands, do not stay in the same area for too long when the machine automatically turns.
4. This product is an intelligent control system. During charging, the system will be in automatic protection state (i.e., it will not work during charging).

Facial cleanness:

1. Aim the brush head at the slot and press and install it on the machine
2. Press the switch button to start the machine, and then press the button to select the gear position. The order of the keys is one gear is the default when starting the machine, and then automatically shut down, again use must be restarted.
3. Gently move the brush head back and forth on the face, and do not press it with your hand. Don does not stay in the same area for too long when the machine automatically turns.
4. This product is an intelligent control system. During charging, the system will be in automatic protection state (i.e., it will work during charging),

Facial Cleanness:

1. Super fine soft brush to clean your entire face, neck, or other area
2. Wet the face with warm water first, then wet the head of the brush, apply an appropriate. Amount of facial cleanser, then brush the head, clean the forehead, nose, cheeks, bottom bar, or other areas.
3. The machine has high, medium, and low speed to choose from. When cleaning the face, it is suggested to try it first.
4. Turn off the machine after cleaning and remove the brush head of accessories to clean. (note: the fuselage cannot be soaked in water)
5. The clean your face with warm water and dry your skin with soft towel.
6. The ball massage head can be replaced, and the follow-up maintenance products can be rubbed until adsorbed

Replacement of Brush Head

- Tips: for skin health and cleansing effect, please change the brush head every 3 months. Remove the brush head; hold the product handle with your left hand and hold the brush head with you right hand.
- Install brush head; aim the brush head to be replaced at the connection end, tighten it ("click" can be heard) and fix it.

Function Introduction of Brush head:

- ❖ Silica gel head: it can remove grease and makeup residue from the facial surface and helps you remove make-up.
- ❖ Large Brush Head: it cleans the facial skin in a wide range, and the ultra-fine soft brush head deeply cleans the pores and dirt
- ❖ Small silica gel brush head: clean facial skin in a small area, such as corner of mouth, nose, and wing
- ❖ Fine silica gel contact: it is used to gently clean large areas of the face, easily face acne skin, and gently exfoliate.
- ❖ Coarse silica gel contact: it is used the clean the greasy area of the face, remove makeup easily and improve the skin.

Product Parameter:



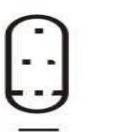


Product Name	Electric Facial Cleaner	Charging Time	4H
Product Model	CC-9084	Product Usage	Clean, Massage
Vibration Frequency	6000T/minute	Power Rating	1W± -0.1

The Product Principle:

Electric silica gel multi-function meter USES soft gentle cleaning medical silicone contact, cooperate with high frequency vibration technology, output per minute 6000 sound vibration technology, through the vertical acoustic deep clean skin , dirt from the pores "shoot" out, safe and no stimulation, effectively remove dirt and impurities 98.5%, at the same time also can remove dead skin cut in, shrink pores, promote the follow-up care product absorption, improve acne and acne scars, promote the blood circulation, fade wrinkles, skin healthy luster.

Function Characteristics:

The special super fine fiber soft brush, combined with the deep cleaning method, and can effectively promote the effective absorption of skin care products, reduce pores, fade fine lines and wrinkles, make the skin younger.

				
The whole body is waterproof	Rapid Cleansing	Four Levels	ABS Materials <small>(For Environmental Protection)</small>	USB Charging

The Charging Method:

1. This product has built-in lithium battery, which can be used for cyclic charging (please use up the residual power left by the factory before charging it for the first time)
2. Unplug the waterproof plug, insert the charging cable into the body, and insert the USB port at the other end into the phone charging head or computer USB port for charging.
3. During the charging progress, the green charging indicator will flicker. If the light stays in without flickering, it means that it is full.
4. It can be fully charged in 4 hours. (Note: it can be charged for about 4 hours, and the charging time should not be too long. So as no to affect the battery life
5. It cannot be turned on when charging.

Clean Save:

1. Please do not wash the main machine in water
2. Do not use cleaning agent or alcohol to clean the products, or it will damage the product.
3. Please use clean dry cloth to wipe the host products.
4. The accessories can be washed in water, the highest water temperature is not more than 50 degrees, after accessories will naturally air dry.
5. Clean the accessories regularly, which helps to extend the service life of the accessories.

Matters Needing Attention:

1. Plastic bags and other packaging materials should be placed out of the reach of children to avoid suffocation or other accidents.
2. Keep the brush well sewn.
3. Do not use on dry or sensitive skin.
4. When the product is in working state, please do not neglect it.
5. Do not use it on the neck for long because the skin is thin.
6. Please place accessories out of reach of children.
7. Please tie your hair with an eraser during use to prevent it from covering your face or getting tangled in the machine.
8. If the product is damaged, do not continue to use,
9. Do not disassemble the product by yourself. If there is any fault or it cannot be used normally, please do not continue to use the product and contact our online customer service in time.

Warranty Ordinance:

- We provide are one-year warranty for our products, which starts from the date of purchase. During the warranty period, we will replace parts or the whole product as the case may be for various defects caused by product materials or production process.
- Warranty claims must be submitted to us with evidence of the date of purchase (order number, etc.).
- We guarantee that the personal information filled in by customers will only be used for free maintenance and regular inspection with the warranty period and will not be used for other purposes.
- This warranty card promises to provide conditional free warranty within the stated warranty period, so according to the

Note that the above warranty does not include the following:

1. Damage caused by improper use (such as using the wrong current and voltage, inserting the product into an unsuitable socket, or artificial damage, etc.)
2. The product aging and wear caused by normal use have little impact on the use function and value of the product.
3. If the product is repaired by unauthorized personal, or the product uses parts other than our company, the warranty period will be terminated.
4. Damage caused by non-domestic use (such as industrial and commercial use).
5. The service provided during the warranty period does not affect the end of the warranty period, and the warranty of the of the replaced parts or complete machine during the warranty period.

