

the nose towards the ear. Do not push the attachment too hard onto the skin to make sure the treatment too hard onto the skin to make sure the treatment remains comfortable.

7. After approx. 20 seconds you can move the attachment to your left cheek and start cleansing this part of your face.

Caution: Do not clean the sensitive area around your eyes.

8. After approx. 20 seconds you can move the attachment to your forehead and start cleansing this part of your face. Gently move the attachment from left to right.

Note: We advise you not overdo the cleansing and not cleanse any area longer than 20 seconds.

9. After the treatment rinse and dry your face. Your face is now ready for the next step of your daily skin care routine.

10. Clean the attachment after use (see Chapter Cleaning and Maintenance).

Accessories

The following accessories are included with the product:
Charger, Brush



Environmental Protection

1. To discard the product, please do not put it together with general domestic rubbish heaps but hand it to the officially designated recycle center for the environmental protections (Fig.27)
2. The built-in rechargeable battery contains substances which may pollute the environment, so it must be unloaded from the product or sent to the officially designated recycle center to be disposed before it is discarded.

The battery should not be unloaded unless it has been used up.

1. Unplug the charger and pull out the product's plug from the shaver.
2. Unload the battery. Do not plug in the shaver again after unloading the battery.



5 in 1
Razor Head
Facial Cleaning
Precision Trimmer
Nose & Ear
Trimmer
Soft Face Sponge



User Manual

Model: CC-9109

Product Brief Introduction




- a. Shaver
- b. Charger
- c. Comb
- d. Precision Trimmer
- e. Nose Trimmer Cover
- f. Nose & Ear Trimmer
- g. Soft Face Sponge
- h. Facial Cleaning Brush

Notes:

Before using the product, please carefully read the operating instruction and keep properly for future reference.

1. Only the included charger can be used.
2. Charge voltage 110-240V, 2.4V/ 3.7V, 5V-(USB)
3. The charger includes a transformer which should not be cut off and replace with another plus; otherwise, it will lead to serious result.
4. If the charger is damaged, it should be replaced with a new one with the original type to avoid danger.
5. The three blade is made of super thin alloy. To avoid of breakage, please do not press it by hand (Fig. 1).
6. The temperature for the product's charger and storage should not exceed 5°C-35°C.
7. Make sure the charger cannot be rinsed under water (Fig.2)

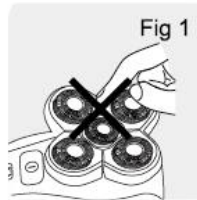

SOFT FACE SPONGE

With cleansing brush, can wash your face softly and clean

Trimming

Used for trimming temple and mustache.

1. Push the slide face upward to open the shaver start (Fig. 23)

Using the cleansing brush attachment




Use the rotating brush attachment with you daily cleansing cream. The cleansing brush attachment removes oil and dirt, contributing to a healthy and oil-free skin.

1. Make sure the appliance is switched off and attach the cleansing brush attachment to the appliance. (Fig 24)
2. Moisten the attachment with water. Do not use the appliance with a dry brush head, as this can irritate the skin.

Note: Soft face sponge and facial. Cleansing brush are using same level (Fig. 25-1-2).

Tip: Use the attachment before shaving for easier shaving and more hygienic shaving result.

3. Moisten your face with water and apply a cleanser to your face
4. Place the attachment on your right cheek. (Fig 26)
5. Switch on the appliance.
6. Gently move the attachment across your skin from.

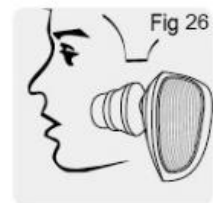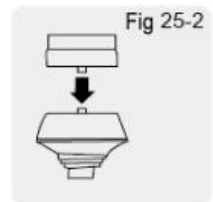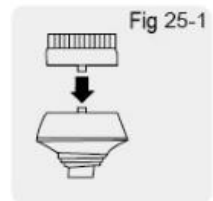

Cleanness/ Lubricate


1. Take out the precision trimmer head, use fresh to clean the trimmer or clipper, or wash the trimmer head.
2. Do not use abrasive, alcohol, or acetone etc. liquid to wash the product.
3. You should clean the product immediately after using once.
4. For best using and clip effect, please add some lubricating oil every three months.

Note: The Lubricant oil is not included in the package.




Nose Trimmer Instruction:

1. Turn off the shaver power, remove the shaver head, insert the nose trimmer into the slot of the top shaver.
2. Then press down the nose trimmer head parts to installed in the shaver body.
3. Hear the sound like "kaca". (Fig.20)

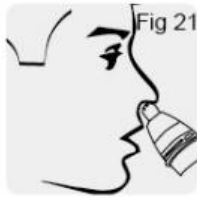

Trim Nose Hair:

1. Make sure your nose is clean
2. Open the switch, put the nose trimmer towards your inside nose, turn the nose trimmer to clip your long nose hair (Fig.21). Do not exceed 0.5 cm for nose trimmer length inside your nose. To reduce itch, you should put one side of the nose trimmer tip close your skin.

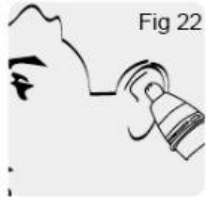

Clip Ear Hair

1. Clean outside ear, make sure no earwax.
2. Open the switch, then turn the trimmer tip towards your ear to clip you long ear hair.
3. Put the trimmer tip towards your outside earlap slowly. (Fig.22)
Do not exceed 0.5cm for trimmer tip length inside your ear.

8. Unplug the charger before cleaning the shaver with running water. (Fig.3)

9. The waterproof grade IPX4,

10. This product cannot be used by physically distempered, sensorially or mentally disordered, or in experienced persons (including children), unless they are under supervision or instruction by people in charge of their security.

11. Take care of children to keep them away from this product.

12. Please clean inside beard if the shaver cannot work after you press the switch.

13. It is necessary to ensure to put the protective cover on the shaver when you travel to protect the shaver head.

Charge

Make sure the product is power-off before the charge. Fast charge for DC: 3,7V, 1-2h, DC:2.4V, 5-8h. Keep use about 2.4V for 30 minutes, 3.7V for 60minutes after full charge. (Fig.4)

Its better for the product not to be connected to the power supply for more than 24 hours.

1. Insert the product charger into the shaver (Fig.5).
2. Plug in the charger.
3. The charge indicator light up (Fig. 6)
4. After the full charge, unplug the charger and also pull out the products' plug from the shaver.
4. It can charge with the charging base.

How to Use Product

Shaving

1. Press the button ON/OFF to start the shaver.




2. Make the shaver head part move quickly on the skin in straight lines and circles (Fig.7).

To ensure a better shaving effect the shaver must be cleaned regularly. The easiest and most sanitary way to clean the product is to wash the shaver head part and the whisker storeroom with water each time after using it.

1. Stop the shaver (Fig.9)



2. Pull away the shaver heads on the side one by one and then rotate and pull out the middle head in the arrow direction indicated on it.

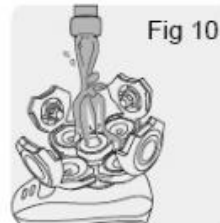

3. Clean the shaver head part and the hair storeroom for some time with running water (Fig.10). Make sure the inside of both the shaver head part and the hair storeroom has been cleaned thoroughly.

4. Wash the products surface (Fig.11).



5. Close the shaver head part and throw off surplus water.

Do not wipe the shaver head part with a towel or paper tissues, which may cause damages to the shaver head.

6. Open the shaver head part again and remain so to dry up the product (Fig.12)

You can also use the brush included to clean the hair storeroom.




Change

Change the shaver head once a year to get the best shaving effect. The shaver has a long service life if not damaged for human factors.

The damages shaver head can only be replacing with shaver head of this company.

1. Pull out the old shaver head assembly out of the shaver (Drawing) (Fig.13).

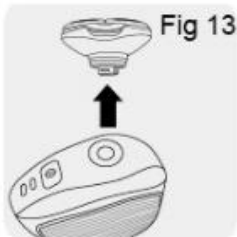

2. Insert the new shaver head assembly into the groove (1) on the shaver's top and press down the shaver head assembly (2) to mount it on the shaver (a click will be heard) (Fig.14)

PRECISION TRIMMER Instruction

Turn off the shaver power, remove the shaver head insert the hair clipper into the slot of the top shaver. Then press down the hair clipper head parts to installed in the shaver body. (hear the sound like "kaca". (Fig.15)




TRIMMER

Note! Make sure your hair is clean and dry. Do not use the product for wet hair.

1. Take note that comb your hair according to hair growth direction before clip hair.



2. Put on the comb accessories to the slot both sides, the sound like "kaca", make sure the comb accessories have already fix on slot both sides in true ways (Fig.16)

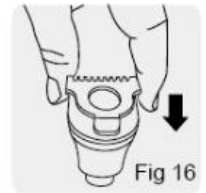

3. The comb accessories have two length "3mm" "5mm" and "7mm" for clip hair with different length. Replacing the comb accessories direction according to length mark in the bottom (Fig. 17)



Power down the comb accessories from one side slot to another (Fig.18).

4. Open the switch, use it above hair slowly. For good clip effect, please use the product in the different direction from hair growth direction.



