

#### 4. HOW TO CLEAN THE ELECTRIC CLOTHES DRYER:

- Before cleaning, the clothes dryer must be disconnected from the power source & the heating region allowed to cool down.
- Do not immerse any part of the clothes dryer in water.
- Wipe the clothes dryer down a damp cloth, then use a soft cloth to dry the clothes dryer. Note: Never use metal balls or scourers to clean the racks
- Ensure the power cord and plug are completely dry before using again.

#### Correct Disposal of this Product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was Purchased. They can take this product for environmental safe recycling.

#### 5. WARRANTY INFORMATION:

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service center. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.


- The warranty will not apply in cases of:
- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances



**HERZBERG**<sup>®</sup>  
HOME AND LIVING

## ELECTRIC CLOTHES DRYER

### Instructions

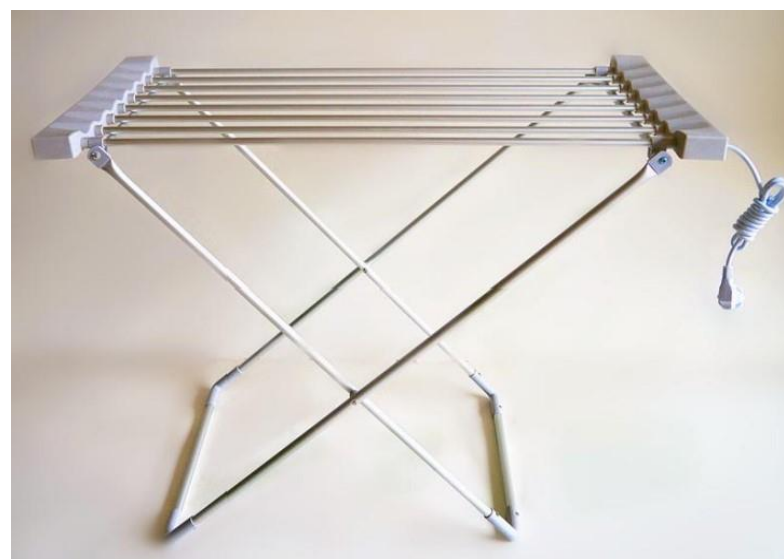

<b>Model: HG-8070</b>	<b>Rating: 220-240V ~ 50Hz, 120W</b>
<b>Dimension: 95cm x 50cm x 74cm</b>	<b>IP Degree: IP X1</b>




Before using this product, please read the following instructions carefully and keep for future reference.

### 1. WARNING:

- This product should be installed and placed away from the shower, bath, or any area which could cause water damage.
- Upon opening, if the supply cord is damaged it must be replaced by the manufacturer, a service agent, or similarly qualified persons to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
  - Children should not play with the appliance; this is not a toy.
  - Cleaning and user maintenance should not be carried out by children without supervision.
  - This appliance is intended only for drying textiles washed in water.
- Only use to dry Washable textiles, Silk fabric is prohibited to dry.
- After being on for 5 minutes, the Heating Region temperature remains constant at 50-55 degrees.
- Do not use to dry textiles which become marked or damaged to direct heat contact.
- To conserve energy and use the clothes dryer safely, please wring out your clothes before placing on the clothes dryer.
- The clothes dryer should only be connected to power source compatible with the voltage stated.
- Do not use the electric clothes dryer if the heating pipes or any other part are damaged.
- Your electric clothes dryer comes equipped with a VDE plug.
- If the power cord needs repairing, the clothes dryer must be completely disconnected from the power supply.

### 2. COMPONENTS AND FUNCTION:

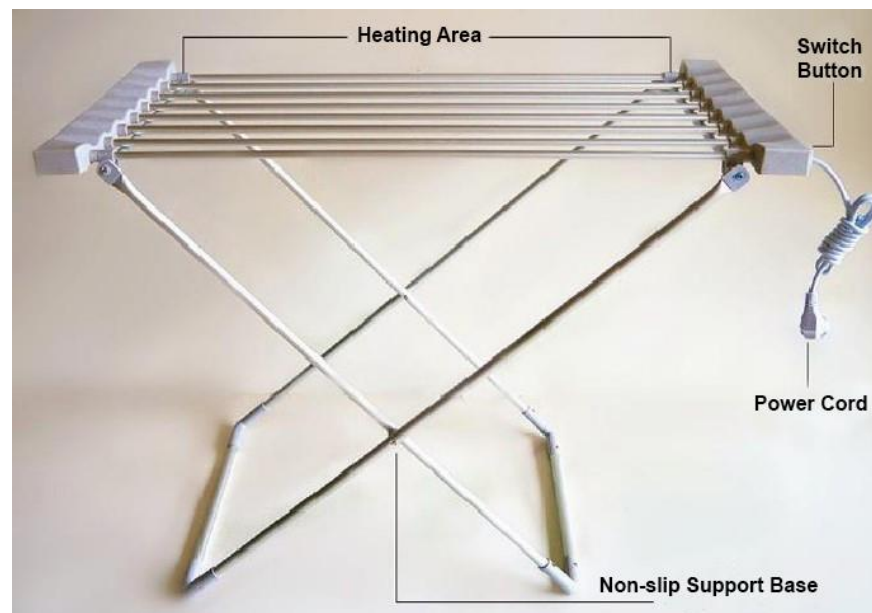

Item	Part Description	Function
1	Power Cord	Connects from your home power supply
2	Switch Button	Switch/ Regulate power from on and off
3	Non-Slip Support Base	Support the unit with a non-slip design
4	Heating Region	Area use for drying clothes

### 3. PRODUCT USAGE INSTRUCTION:

- When using the clothes dryer, please refer to these safety instructions.
- Open out the support legs as shown in the images below. After placing on a stable floor, turn on the Switch button to activate the clothes dryer.
- Once you have finished using the clothes dryer, unplug from the power source and fold the support legs & wings for easy storage.

